

JAMES OAKLEY

P.O. Box 3343

Eden, N.C. 27288

Tanks filled 2-15-90

RECEIVED  
N.C. Dept. NRCD

FEB 20 1990

Winston-Salem  
Regional Office

REMITTANCE COPY  
GUILFORD LABORATORIES, INC.  
PIEDMONT RESEARCH LABORATORIES

DATE: 2/9/90  
INVOICE NO.

P.O. BOX 9735  
GREENSBORO, NORTH CAROLINA 27408

RECEIVED  
N.C. Dept. NRCD

FEB 20 1990

Winston-Salem  
Regional Office

SOLD  
TO

Jones Oakley

SHIPPED  
TO

KINDLY RETURN YELLOW COPY WITH YOUR REMITTANCE

DESCRIPTION	AMOUNT
L TPA test @ 95.00  PAID check # 1304	380.00



**GUILFORD LABORATORIES, INC.**  
P.O. Box 9735/Plaza Station/Greensboro, N.C. 27408

February 9, 1990

REPORT OF ANALYSIS

JOB #: JMS00206

CUSTOMER: James Oakley


SAMPLE: # 1550 SOIL - RIGHT TANK A FRONT GAS  
# 1551 SOIL - RIGHT TANK D BACK GAS  
# 1552 SOIL - LEFT TANK B FRONT GAS  
# 1553 SOIL - LEFT TANK C BACK GAS

<u>RESULTS</u>	<u>1550</u>	<u>1551</u>	<u>1552</u>	<u>1553</u>
Total Petroleum Hydrocarbons (ppm) by Method 5030	<10	<10	<10	<10

Guilford Laboratories, Inc.

  
J. A. Rayburn



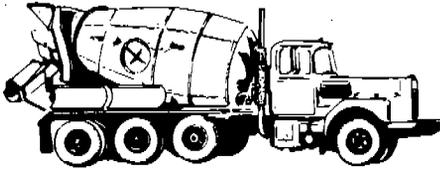

# G. B. GREEN & SON, INC.

READY-MIXED CONCRETE

Box 1177 Highway 87 Reidsville, N. C. 27320

Office (919) 349-8803

Concrete Orders (919) 342-5771

"We've Built 35 Years Experience Into Our Concrete"

Load	Leave Plant	Arrive Job Site	Start Discharge	Finish Disch.	Leave Job Site	Arrive Plant
:	:	:	:	:	:	:

### DON'T ADD UNNECESSARY WATER

The Slump Strength and Quality of Concrete is not Guaranteed if water or Any Other Material has been added by or at the Request of Purchaser.

Gals of Water Added on Job As Authorized by Customer

CYLINDERS TAKEN

YES  NO

SLUMP TEST (INCHES) \_\_\_\_\_

AIR TEST (%) \_\_\_\_\_

X

Plant	Ticket No.	Truck	Load Size	Mix	Slump	Use	Date
Customer No.	Sold To			Tx Cd	Driver		
Delivery Address				P.O. No.		Order No.	

Instructions	Time Due

LOAD QUANTITY	CUMULATIVE QUANTITY	ORDERED QUANTITY	PRODUCT CODE	PRODUCT DESCRIPTION	UNIT OF MEASURE	UNIT PRICE	AMOUNT

SUBTOTAL  
TAX  
TOTAL

**CAUTION:** Freshly mixed cement, mortar, concrete or grout may cause skin injury. Avoid contact with eyes where possible and wash exposed skin areas promptly with water. If any cement mixtures get into eyes rinse immediately and repeatedly with water and get prompt medical attention.

